

RYOBI ERSÄTTNINGSBATTERI CS-RTB815PW

Ersätter Ryobi originalbatteri

CS-RTB815PW
Ryobi ersättningsbatteri



Produktbeskrivning

Spänning: 18 volt

Kapacitet: 3000mAh / 54.00Wh

System: Li-Ion

Mått: 135,30mm x 81,30mm x 196,4mm

Passar följande Ryobi modeller:

ONE+ 18 Volt Cordless Tools, BID-1801M, BID-180L, BID1821, BIW180, [CAD-180L](#), [CAG-180M](#), [CAP-1801M](#), CCC-1801M, CCC-180L, CCD-1801, CCG-1801M, CCG-180L, CCS-1801/DM, CCS-1801/LM, CCS-1801D, CCS-1801LM, CCW-180L, CDA-18021B, CDA1802, CDA18021B, CDA18022B, CDA1802M, CDC-181M, CDI-1802, CDI-1802M, CDI-1803, CDI-1803M, CID-1802M, CID-1803L, CID-1803M, CID-182L, CID-183L, CFA-180M, CFP-180FM, CFP-180S, CFP-180SM, CHD-1801M, CHI-1802M, CHP-1802M, CHV-180L, CHV-18WDM, CJS-180L, CJS-180LM, CJSP-1801QEOM, CJSP-180QEOM, OBL-1801, OCS-1840, OGS-1820, OHT-1850, OLT-1830, OPS-1820, ORS-1801, OWD-1801M, P200, P2000, P2002, P201, P203, P204, P206, P2060, P208B, P210, P2100, P2102, P2105, P211, P220, P221, P230, P234G, P236, P240, P2400, P241, P246, P250, P2500, P2600, P2603, P271, P300, P301, P310, P3200, P3300, P3310, P340, P400, P410, P420, P430, P500, P501, P506, P510, P514, P520, P521, P522, P530, P540, P570, P600, P610, P631K, P650, P700, P701G, P703, P704, P710, P711, P715, P716, P730, P731, P740, P741, P780, P813, P835, P713, P718, P718K

Ersätter följande Ryobi artikel.nr:

BPL1815, BPL-1815, BPL-1820G, BPL1820, BPL18151, P102, P103, P104, P105, P106, P107, P108, ABP1801, ABP1803, BCP1817/2SM, [BPP-1813](#), [BPP-1815](#), [BPP-1817](#), [BPP-1817/2](#), [BPP-1817M](#), [BPP-1820](#), [RB18L25](#)