

RYOBI ERSÄTTNINGSBATTERI CS-RTB820PW

Ersätter Ryobi originalbatteri

CS-RTB820PW
Ryobi ersättningsbatteri



Produktbeskrivning

Spänning: 18V

Kapacitet: 4500mAh / 81.00Wh

System: Li-Ion

Mått: 135,50mm x 91,40mm x 127,30mm

Passar följande Ryobi modeller:

ZRP813, BID-1801M, BID-180L, BID1821, BIW180, CDL1802P4, CAD-180L, CAG-180M, CAP-1801M, CCC-1801M, CCC-180L, CCD-1801, CCG-1801M, CCS-1801/LM, CCS-1801D, CCS-1801LM, CCW-180L, CDA-18021B, CDA1802, CDA18021B, CDA18022B, CDA1802M, CDC-181M, CDI-1802, CDI-1802M, CDI-1803, CDI-1803M, CID-1802M, CID-1803L, CID-1803M, CID-182L, CID-183L, CJS-180L, CJS-180LM, CJSP-1801QEOM, CJSP-180QEOM, CJSP-180QEOM, CMD-1802, CMD-1802M, CMI-1802, CMI-1802M, CML-180M, CNS-1801M, CNS-180L, CP-180M, CPD-1800, CPL-180M, CRA-180M, CRH1801, CRO-180M, CRP-1801, CRP-1801/DM, CRP-1801D, CRS 1803, CRS-180L, CSL-180L, CSS-1801M, CSS-180L, CST-180M, CTR-180L, CW-1800, LCD1802, LCD18021B, LCD18022B, LCD1802M, LCS-180, LDD-1802, LDD-1802PB, LDD1801PB, LDD1802PB, LFP-1802S, LRS-180, OBL-1801, OCS-1840, OGS-1820, OHT-1850, OLT-1830, OPS-1820, ORS-1801, OWD-1801M, P200, P2000, P2002, P201, P203, P204, P206, P2060, P208B, P210, P2100, P2102, P2105, P211, P220, P221, P230, P234G, P236, P240, P2400, P241, P246, P250, P2500, P2600, P2603, P271, P300, P301, P310, P3200, P3300, P3310, P340, P400, P410, P420, P430, P500, P501, P506, P510, P514, P520, P521, P522, P530, P540, P570, P600, P610, P631K, P650, P700, P701G, P703, P704, P710, P711, P715, P716, P730, P731, P740, P741, P780, P813, P835, P713, P718, ONE+ 18 Volt Cordless Tools

Ersätter följande Ryobi artikel.nr:

BPL-1815, BPL18151, BPL1820, BPL-1820G, P102, P103, P104, P105, P106, P107, P108, P193, P194, ABP1801, ABP1803, BCP1817/2SM, BPL1815, BPP-1813, BPP-1815, BPP-1817, BPP-1817/2, BPP-1817M, BPP-1820, RB18L25